



Quick Guide



VLT® Micro Drive FC 51

1. Quick Guide

1.1.1. Available Literature

 **NB!**
 This quick guide contains the basic information necessary for installing and running the VLT Micro Drive.
 In case more information is needed, the below literature can be downloaded from
<http://www.danfoss.com/BusinessAreas/DrivesSolutions/Documentations/Technical+Documentation.htm>.

Title	Literature no.
VLT Micro Drive FC 51 Operating Instructions	MG.02.AX.YY
VLT Micro Drive FC 51 Quick Guide	MG.02.BX.YY
VLT Micro Drive FC 51 Programming Guide	MG.02.CX.YY
FC 51 LCP Mounting Instruction	MI.02.AX.YY
FC 51 De-coupling Plate Mounting Instruction	MI.02.BX.YY
FC 51 Remote Mounting Kit Mounting Instruction	MI.02.CX.YY
FC 51 DIN Rail Kit Mounting Instruction	MI.02.DX.YY
FC 51 IP21 Kit Mounting Instruction	MI.02.EX.YY
FC 51 Nema1 Kit Mounting Instruction	MI.02.FX.YY

X = Revision number

Y = Language code

1.1.2. High Voltage Warning

 The voltage of the frequency converter is dangerous whenever it is connected to mains. Incorrect installation of the motor or frequency converter may cause damage to the equipment, serious injury or death. Consequently, it is essential to comply with the instructions in this manual as well as local and national rules and safety regulations.

1.1.3. Safety Instructions

- Make sure the frequency converter is properly connected to earth.
- Do not remove mains connections, motor connections or other power connections while the frequency converter is connected to power.
- Protect users against supply voltage.
- Protect the motor against overloading according to national and local regulations.
- The earth leakage current exceeds 3.5 mA.
- The [OFF] key is not a safety switch. It does not disconnect the frequency converter from mains.

1.1.4. Approvals

1.1.5. General Warning



Warning:

Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains.

Also make sure that other voltage inputs have been disconnected, (linkage of DC intermediate circuit).

Be aware that there may be high voltage on the DC link even when the LEDs are turned off.

Before touching any potentially live parts of the VLT Micro Drive, wait at least 4 minutes for all sizes.

Shorter time is allowed only if indicated on the nameplate for the specific unit.



Leakage Current

The earth leakage current from the VLT Micro Drive FC 51 exceeds 3.5 mA. According to IEC 61800-5-1 a reinforced Protective Earth connection must be ensured by means of a min. 10mm² Cu or an additional PE wire - with the same cable cross section as the Mains wiring - must be terminated separately.

Residual Current Device

This product can cause a D.C. current in the protective conductor. Where a residual current device (RCD) is used for extra protection, only an RCD of Type B (time delayed) shall be used on the supply side of this product. See also Danfoss Application Note on RCD, MN. 90.GX.YY.

Protective earthing of the VLT Micro Drive and the use of RCDs must always follow national and local regulations.



Motor overload protection is possible by setting Parameter 1-90 Motor thermal protection to the value ETR trip. For the North American market: ETR functions provide class 20 motor overload protection, in accordance with NEC.



Installation in high altitudes:

By altitudes above 2km, please contact Danfoss Drives regarding PELV.

1.1.6. IT Mains



IT Mains

Installation on isolated mains source, i.e. IT mains.

Max. supply voltage allowed when connected to mains: 440 V.

As an option, Danfoss offers line filters for improved harmonics performance.

1.1.7. Avoid unintended Start

While the frequency converter is connected to mains, the motor can be started/stopped using digital commands, bus commands, references or via the Local Control Panel.

- Disconnect the frequency converter from mains whenever personal safety considerations make it necessary to avoid unintended start of any motors.
- To avoid unintended start, always activate the [OFF] key before changing parameters.

1.1.8. Disposal Instruction



Equipment containing electrical components must not be disposed of together with domestic waste. It must be separately collected with electrical and electronic waste according to local and currently valid legislation.

1.1.9. Before Commencing Repair Work

1. Disconnect FC 51 from mains (and external DC supply, if present.)
2. Wait for 4 minutes for discharge of the DC-link.
3. Disconnect DC bus terminals and brake terminals (if present)
4. Remove motor cable

1.1.10. Side-by-Side Installation

The Danfoss VLT Micro Drive can be mounted side-by-side for IP 20 rating units and requires 100 mm clearance above and below for cooling. Please refer to the specifications near the end of this document for details on environmental ratings of the VLT Micro FC 51.

1.1.11. Mechanical Dimensions

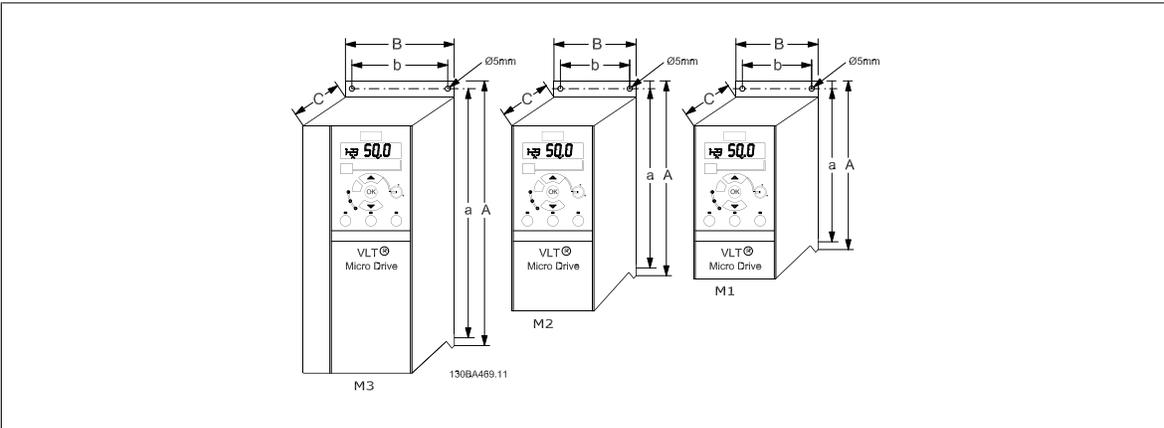


Illustration 1.1: Mechanical dimensions.

Frame	Power (kW)			Height (mm)		Width (mm)		Depth ¹⁾ (mm)	Max. Weight (Kg)	
	1 X 200-240 V	3 X 200 -240 V	3 X 380-480 V	A	A (incl. decoupling plate)	a	B			b
M1	0.18 - 0.75	0.25 - 0.75	0.37 - 0.75	150	205	140.4	70	55	148	1.1
M2	1.5	1.5	1.5 - 2.2	176	230	166.4	75	59	168	1.6
M3	2.2	2.2 -3.7	3.0 - 7.5	2)	2)	2)	2)	2)	2)	2)

Table 1.1: Mechanical Dimensions

¹⁾ For LCP with potentiometer, please add 7.6 mm.

²⁾ These dimensions will be announced at a later point.

1.1.12. Electrical Installation in General



NB!
All cabling must comply with national and local regulations on cable cross-sections and ambient temperature. Copper conductors required, (60-75° C) recommended.

Details of terminal tightening torques.

Frame	Power (kW)			Torque (Nm)					
	1 x 200-240 V	3 x 200-240 V	3 x 380-480 V	Line	Motor	DC connection/Brake ¹⁾	Control Terminals	Earth	Relay
M1	0.18 - 0.75	0.25 - 0.75	0.37 - 0.75	1.4	0.7	-	0.15	3	0.5
M2	1.5	1.5	1.5 - 2.2	1.4	0.7	-	0.15	3	0.5
M3	2.2	2.2 - 3.7	3.0 - 7.5	1.4	0.7	-	0.15	3	0.5

¹⁾ Spade connectors

Table 1.2: Tightening of terminals.

1.1.13. Fuses**Branch circuit protection:**

In order to protect the installation against electrical and fire hazard, all branch circuits in an installation, switch gear, machines etc., must be short-circuited and overcurrent protected according to national/international regulations.

Short circuit protection:

Danfoss recommends using the fuses mentioned in the following tables to protect service personnel or other equipment in case of an internal failure in the unit or short-circuit on DC-link. The frequency converter provides full short circuit protection in case of a short-circuit on the motor or brake output.

Overcurrent protection:

Provide overload protection to avoid overheating of the cables in the installation. Overcurrent protection must always be carried out according to national regulations. Fuses must be designed for protection in a circuit capable of supplying a maximum of 100,000 A_{rms} (symmetrical), 480 V maximum.

NonUL compliance:

If UL/cUL is not to be complied with, Danfoss recommends using the fuses mentioned in table 1.3, which will ensure compliance with EN50178:

In case of malfunction, not following the fuse recommendation may result in damage to the frequency converter.

FC 51	Bussmann	Bussmann	Bussmann	Littel fuse	Ferraz-Shawmut	Ferraz-Shawmut	Max. fuses non UL
1 X 200-240 V							
kW	Type RK1	Type J	Type T	Type RK1	Type CC	Type RK1	Type gG
0K18 - 0K37	KTN-R15	JKS-15	JJN-15	KLN-R15	ATM-R15	A2K-15R	15A
0K75	KTN-R25	JKS-25	JJN-25	KLN-R25	ATM-R25	A2K-25R	25A
1K5	KTN-R35	JKS-35	JJN-35	KLN-R35	-	A2K-35R	35A
2K2	KTN-R45	JKS-45	JJN-45	KLN-R45	-	A2K-45R	45A
3 x 200-240 V							
0K25	KTN-R10	JKS-10	JJN-10	KLN-R10	ATM-R10	A2K-10R	10A
0K37	KTN-R15	JKS-15	JJN-15	KLN-R15	ATM-R15	A2K-15R	15A
0K75	KTN-R20	JKS-20	JJN-20	KLN-R20	ATM-R20	A2K-20R	20A
1K5	KTN-R25	JKS-25	JJN-25	KLN-R25	ATM-R25	A2K-25R	25A
2K2	KTN-R30	JKS-30	JJN-30	KLN-R30	ATM-R30	A2K-30R	30A
3K7	KTN-R45	JKS-45	JJN-45	KLN-R45	-	A2K-45R	45A
3 x 380-480 V							
0K37 - 0K75	KTS-R10	JKS-10	JJS-10	KLS-R10	ATM-R10	A6K-10R	10A
1K5	KTS-R15	JKS-15	JJS-15	KLS-R15	ATM-R15	A2K-15R	15A
2K2	KTS-R20	JKS-20	JJS-20	KLS-R20	ATM-R20	A6K-20R	20A
3K0	KTS-R25	JKS-25	JJS-25	KLS-R25	ATM-R25	A6K-25R	25A
4K0	KTS-R30	JKS-30	JJS-30	KLS-R30	ATM-R30	A6K-30R	30A
5K5	KTS-R35	JKS-35	JJS-35	KLS-R35	-	A6K-35R	35A
7K5	KTS-R45	JKS-45	JJS-45	KLS-R45	-	A6K-45R	45A

Table 1.3: Fuses

1.1.14. Connecting to Mains and Motor

The VLT Micro FC 51 is designed to operate all standard three-phased asynchronous motors.

The VLT Micro FC 51 is designed to accept mains/motor cables with a maximum cross-section of 4 mm² (10 AWG).

- Use a shielded/armored motor cable to comply with EMC emission specifications, and connect this cable to both the decoupling plate and the motor metal.
- Keep motor cable as short as possible to reduce the noise level and leakage currents.

For further details on mounting of the decoupling plate, please see instruction MI.02.BX.YY.

Step 1: First, mount the earth wires to earth terminal.

Step 2: Mount mains supply to terminals L1/L, L2 and L3/N (3-phase) or L1/L and L3/N (single-phase) and tighten.

Step 3: Connect motor to terminals U, V and W.

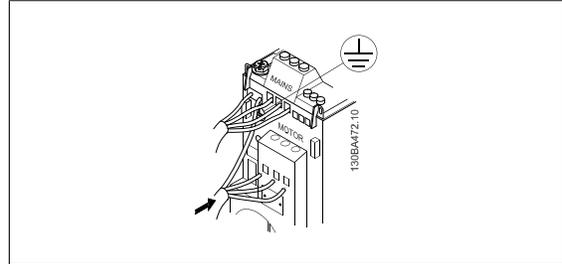


Illustration 1.2: Mounting of earth cable, mains and motor wires.

1.1.15. Control Terminals

All control cable terminals are located underneath the terminal cover in front of the frequency converter. Remove the terminal cover using a screwdriver.

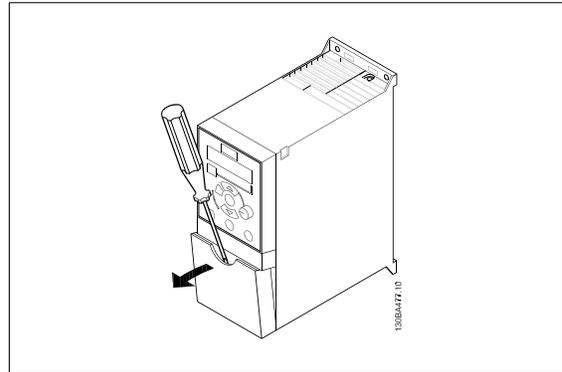


Illustration 1.3: Removing terminal cover.

The illustration below shows all control terminals of the VLT Micro Drive. Applying Start (term. 18) and an analog reference (term. 53 or 60) make the frequency converter run.

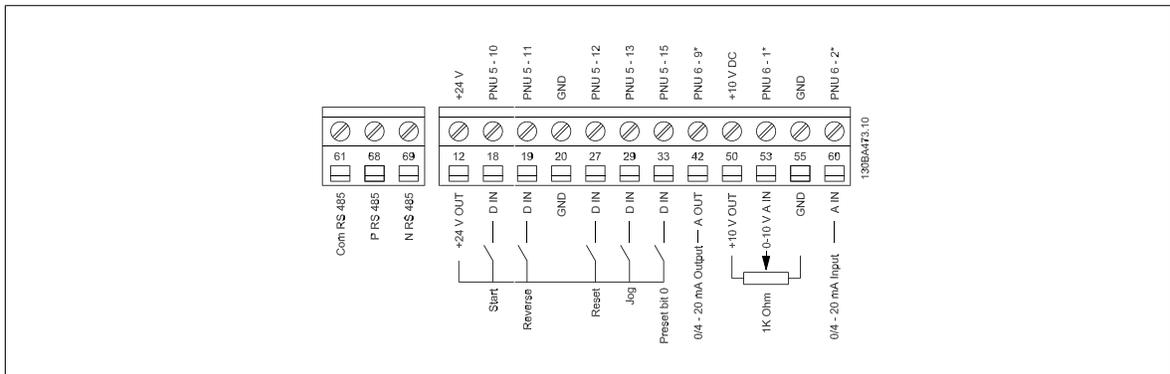


Illustration 1.4: Overview of control terminals in PNP-configuration and factory setting.

NB!
Do not operate switches with power on the frequency converter.
Parameter 6-19 must be set according to Switch 4 position.

1

S200 Switches 1-4:

Switch 1:	*OFF = PNP terminals 29 ON = NPN terminals 29
Switch 2:	*OFF = PNP terminal 18, 19, 27 and 33 ON = NPN terminal 18, 19, 27 and 33
Switch 3:	No function
Switch 4:	*OFF = Terminal 53 0 - 10 V ON = Terminal 53 0/4 - 20 mA

* = default setting

Table 1.4: Settings for S200 Switches 1-4

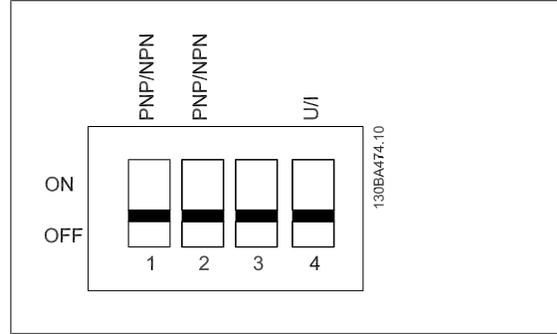


Illustration 1.5: S200 Switches 1-4.

1.1.16. Power Circuit - Overview

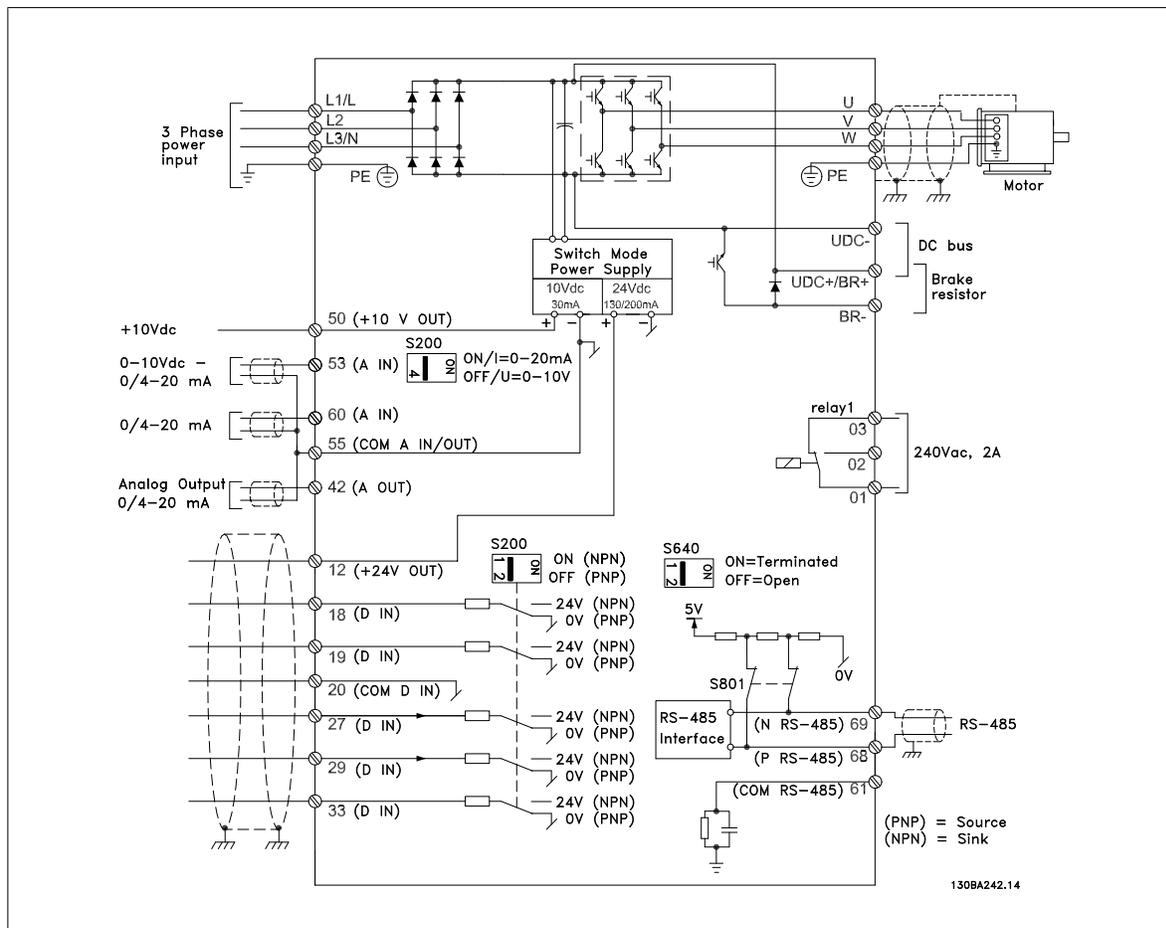


Illustration 1.6: Diagram showing all electrical terminals.

Brake not applicable for frame M1.

Brake resistors are available from Danfoss.

Improved power factor and EMC performance can be achieved by installing optional Danfoss line filters.

Danfoss power filters can also be used for load sharing.

1.1.17. Load sharing/Brake

Use 6.3 mm insulated Faston Plugs designed for high voltage for DC (Load Sharing and brake).

Contact Danfoss or see instruction no. MI.50.Nx.02 for load sharing and instruction no. MI.90.Fx.02 for brake.

Load sharing: Connect terminals UDC- and UDC/BR+.

Brake: Connect terminals BR- and UDC/BR+.



Note that voltage levels of up to 850 V DC may occur between terminals UDC+/BR+ and UDC-. Not short circuit protected.

1.1.18. Programming with LCP

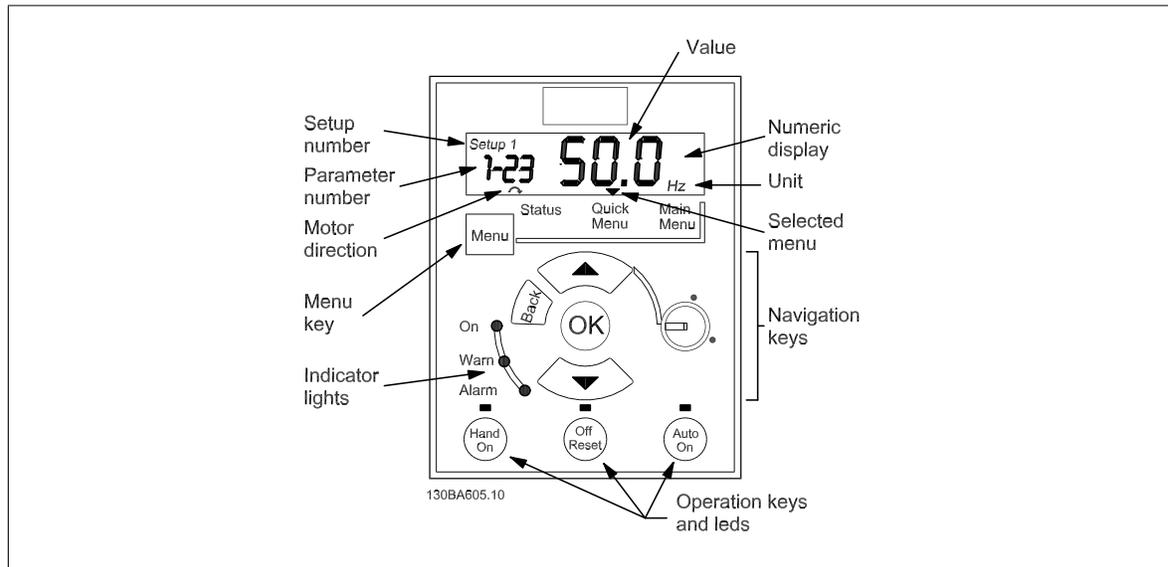


Illustration 1.7: Description of LCP buttons and display

Use the [MENU] key to select one of the following menus:

Status Menu:

For readouts only.

Quick Menu:

For access to Quick Menus 1 and 2, respectively.

Main Menu:

For access to all parameters.

For detailed information on programming, please see *Programming Guide*, MG02CXYY.

Navigation Keys:

[Back]: For moving to the previous step or layer in the navigation structure.

Arrows [▲] [▼]: For manoeuvring between parameter groups, parameters and within parameters.

[OK]: For selecting a parameter and for accepting changes to parameter settings.

Operation Keys:

A yellow light above the operation keys indicates the active key.

[Hand on]: Starts the motor and enables control of the frequency converter via the LCP.

[Off/Reset]: The motor stops except in alarm mode. In that case the motor will be reset.

[Auto on]: The frequency converter is controlled either via control terminals or serial communication.

[Potentiometer] (LCP12): The potentiometer works in two ways depending on the mode in which the frequency converter is running.

In *Auto Mode* the potentiometer acts as an extra programmable analog input.

In *Hand on Mode* the potentiometer controls local reference.

Arrows [▲] and [▼] toggles between the choices in each menu.

The display indicates the status mode with a small arrow above "Status".

The Quick Menu gives easy access to the most frequently used parameters.

1. To enter the Quick Menu, press [MENU] key until indicator in display is placed above *Quick Menu*.
2. Use [▲] [▼] to select either QM1 or QM2, then press [OK].
3. Use [▲] [▼] to browse through the parameters in the Quick Menu.
4. Press [OK] to select a parameter.
5. Use [▲] [▼] to change the value of a parameter setting.
6. Press [OK] to accept the change.
7. To exit, press either [Back] twice to enter *Status*, or press [Menu] once to enter *Main Menu*.

No	Name	Range	Default	Function
1-20	Motor Power [kW]/[HP]	[0.09kW/0.12HP - 11kW/15HP]	Unit dependant	Enter motor power from nameplate data
1-22	Motor Voltage	[50 - 999V]	230/400	Enter motor voltage from nameplate data
1-23	Motor Frequency	[20 - 400 Hz]	50	Enter motor frequency form nameplate data
1-24	Motor Current	[0.01 - 26.00 A]	Unit dependant	Enter motor current from nameplate data
1-25	Motor nominal speed	[100 - 9999 RPM]	Unit dependant	Enter motor nominal speed from nameplate data
1-29	Automatic Motor Tuning (AMT)	[0] = off [2] = Enable AMT	[0] = off	Use AMT to optimize motor performance. 1. Stop VLT 2. Choose [2] 3. "Hand On"
3-02	Minimum reference	[-4999 - 4999]	0	Enter value for minimum reference
3-03	Maximum reference	[-4999 - 4999]	50.00	Enter value for maximum reference
3-41	Ramp up time	[0.05 - 3600s]	3.00	Ramp up time from 0 to rated motor frequency par. 1-23
3-42	Ramp down time	[0.05 - 3600s]	3.00	Ramp down time form rated motor frequency par. 1-23 to 0

Table 1.5: Basic Settings Quick Menu 1

The Main Menu gives access to all parameters.

1. To enter the Main Menu, press [MENU] key until indicator in display is placed above *Main Menu*.
2. Use [▲] [▼] to browse through the parameter groups.
3. Press [OK] to select a parameter group.
4. Use [▲] [▼] to browse through the parameters in the specific group.
5. Press [OK] to select the parameter.
6. Use [▲] [▼] to set/change the parameter value.
7. Press [OK] to accept the value.
8. To exit, press either [Back] twice to enter *Quick Menu*, or press [Menu] once to enter *Status*.

Parameter Overview	Parameter Overview	Parameter Overview	Parameter Overview
0-** Operation/Display	1-0* General Settings	1-0* Motor Power [kW] [HP]	1-0* Stator Leakage Reactance (X1)
0-0* Basic Settings	1-00 Configuration Mode	[1] 0.09 kW/0.12 HP	[1] Analog input 53
0-03 Regional Settings	*[0] Speed open loop	[2] 0.12 kW/0.16 HP	[6] Digital input 29
[1] US	[3] Process	[3] 0.18 kW/0.25 HP	2-** Brakes
0-04 Oper. State at Power-up (Hand)	1-01 Motor Control Principle	[4] 0.25 kW/0.33 HP	2-00 DC Brake
[0] Forced	[0] U/f	[5] 0.37 kW/0.50 HP	0 - 150 % * 50 %
*[1] Reverse	*[1] VVC+	[6] 0.55 kW/0.75 HP	2-01 DC Brake Current
[2] Forced stop, ref = old	1-03 Torque Characteristics	[7] 0.75 kW/1.00 HP	0 - 150 % * 50 %
[2] Forced stop, ref = 0	*[0] Constant torque	[8] 1.10 kW/1.50 HP	2-02 DC Braking Time
0-1* Set-up Handling	[2] Automatic Energy Optim.	[9] 1.50 kW/2.00 HP	0 - 150 % * 50 %
0-10 Active Set-up	1-05 Local Mode Configuration	[10] 2.20 kW/3.00 HP	2-04 DC Brake Cut In Speed
*[1] Setup 1	[0] Speed Open Loop	[11] 3.00 kW/4.00 HP	0.0 - 400.0 Hz * 0.0 Hz
[2] Setup 2	*[2] As config in param. 1-00	[12] 3.70 kW/5.00 HP	2-1* Brake Energy Funct.
0-11 Edit Set-up	1-2* Motor Data	[13] 4.00 kW/5.40 HP	2-10 Brake Function
[9] Multi Setup	1-20 Motor Power [kW] [HP]	[14] 5.50 kW/7.50 HP	*[0] Off
[2] Setup 1	[1] 0.09 kW/0.12 HP	[15] 7.50 kW/10.00 HP	[1] Resistor brake
[2] Setup 2	[2] 0.12 kW/0.16 HP	[16] 11.00 kW/15.00 HP	[2] AC brake
[9] Active Setup	[3] 0.18 kW/0.25 HP	1-22 Motor Voltage	2-11 Brake Resistor (ohm)
0-12 Link Setups	[4] 0.25 kW/0.33 HP	50 - 999 V * 230 - 400 V	5 - 5000 * 5
[0] Not Linked	[5] 0.37 kW/0.50 HP	1-23 Motor Frequency	2-16 AC Brake, Max current
*[20] Linked	[6] 0.55 kW/0.75 HP	20 - 400 Hz * 50 Hz	0 - 150 % * 100 %
0-4* LCP Keypad	[7] 0.75 kW/1.00 HP	1-24 Motor Current	2-17 Over-voltage Control
0-40 [Hand on] Key on LCP	[8] 1.10 kW/1.50 HP	0.01 - 26.00 A * Motor type dep.	*[0] Disabled
[0] Disabled	[9] 1.50 kW/2.00 HP	1-25 Motor Nominal Speed	[1] Enabled (not at stop)
*[1] Enabled	[10] 2.20 kW/3.00 HP	100 - 9999 rpm * Motor type dep.	[2] Enabled
0-41 [Off / Reset] Key on LCP	[11] 3.00 kW/4.00 HP	1-29 Automatic Motor Tuning (AMT)	2-2* Mechanical Brake
[0] Disable All	[12] 3.70 kW/5.00 HP	*[0] Off	2-20 Release Brake Current
*[1] Enable All	[13] 4.00 kW/5.40 HP	[2] Enable AMT	0.00 - 100.0 A * 0.00 A
[2] Enable Reset Only	[14] 5.50 kW/7.50 HP	[2] Enable AMT	2-22 Activate Brake Speed [Hz]
0-42 [Auto on] Key on LCP	[15] 7.50 kW/10.00 HP	[2] Enable AMT	0.0 - 400.0 Hz * 0.0 Hz
[0] Disabled	[16] 11.00 kW/15.00 HP	1-30 Stator Resistance (Rs)	3-** Reference / Ramps
*[1] Enabled	1-22 Motor Voltage	[0] * Dep. on motor data	3-0* Reference Limits
0-5* Copy/Save	50 - 999 V * 230 - 400 V	1-3* Adv. Motor Data	3-00 Reference Range
0-50 LCP Copy	1-23 Motor Frequency	1-30 Stator Resistance (Rs)	*[0] Min - Max
*[0] No copy	20 - 400 Hz * 50 Hz	0 - 999 * 0	[1] -Max - +Max
[1] All to LCP	1-24 Motor Current	1-** Load/Motor	3-02 Minimum Reference
[2] All from LCP	0.01 - 26.00 A * Motor type dep.		-4999 - 4999 * 0.000
[3] Size indep. from LCP	1-25 Motor Nominal Speed		3-03 Maximum Reference
0-51 Set-up Copy	100 - 9999 rpm * Motor type dep.		-4999 - 4999 * 50.00
[0] No copy	1-29 Automatic Motor Tuning (AMT)		3-1 References
[1] Copy from setup 1	*[0] Off		3-10 Preset Reference
[2] Copy from setup 2	[2] Enable AMT		-100.0 - 100.0 % * 0.00 %
[9] Copy from Factory setup	[2] Enable AMT		3-11 Jog Speed [Hz]
0-6* Password	1-3* Adv. Motor Data		0.0 - 400.0 Hz * 5.0 Hz
0-60 (Main) Menu Password	1-30 Stator Resistance (Rs)		3-12 Catch up/slow Down Value
0 - 999 * 0	[0] * Dep. on motor data		0.00 - 100.0 % * 0.00 %
1-** Load/Motor			

<p>3-14 Preset Relative Reference -100.0 - 100.0 % * 0.00 %</p> <p>3-15 Reference Resource 1 [0] No function *[1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 [1.1] Local bus ref [2.1] Lcp Potentiometer</p> <p>3-16 Reference Resource 2 [0] No function [1] Analog input 53 *[2] Analog input 60 [8] Pulse input 33 [1.1] Local bus ref [2.1] Lcp Potentiometer</p> <p>3-17 Reference Resource 3 [0] No function [1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 *[11] Local bus ref [2.1] Lcp Potentiometer</p> <p>3-18 Relative Scaling Ref. Resource *[0] No function [1] Analog input 53 [2] Analog input 60 [8] Pulse input 33 [1.1] Local bus ref [2.1] Lcp Potentiometer</p> <p>3-4* Ramp 1 [0] Linear *[0] Sine2 ramp</p> <p>3-41 Ramp 1 Ramp up Time 0.05 - 3600 s * 3.00 s</p> <p>3-42 Ramp 1 Ramp Down Time 0.05 - 3600 s * 3.00 s</p> <p>3-5* Ramp 2 *[0] Linear [2] Sine2 ramp</p> <p>3-51 Ramp 2 Ramp up Time 0.05 - 3600 s * 3.00 s</p> <p>3-52 Ramp 2 Ramp down Time 0.05 - 3600 s * 3.00 s</p> <p>3-8* Other Ramps</p>	<p>3-80 Jog Ramp Time 0.05 - 3600 s * 3.00 s</p> <p>3-81 Quick Stop Ramp Time 0.05 - 3600 s * 3.00 s</p> <p>4-* Limits / Warnings</p> <p>4-1* Motor Limits</p> <p>4-10 Motor Speed Direction [0] Clockwise *[2] Both</p> <p>4-12 Motor Speed Low Limit [Hz] 0.0 - 400.0 Hz * 0.0 Hz</p> <p>4-14 Motor Speed High Limit [Hz] 0.1 - 400.0 Hz * 65.0 Hz</p> <p>4-16 Torque Limit Motor Mode 0 - 400 % * 150 %</p> <p>4-17 Torque Limit Generator Mode 0 - 400 % * 100 %</p> <p>4-5* Adj. Warnings</p> <p>4-50 Warning Current Low 0.00 - 26.00 A * 0.00 A</p> <p>4-51 Warning Current High 0.00 - 26.00 A * 26.00 A</p> <p>4-58 Missing Motor Phase Function [0] Off *[1] On</p> <p>4-6* Speed Bypass</p> <p>4-61 Bypass Speed From [Hz] 0.0 - 400.0 Hz * 0.0 Hz</p> <p>4-63 Bypass Speed To [Hz] 0.0 - 400.0 Hz * 0.0 Hz</p> <p>5-1* Digital Inputs</p> <p>5-10 Terminal 18 Digital Input [0] No function [1] Reset [2] Coast inverse [3] Coast and reset inv. [4] Quick stop inverse [5] DC-brake inv. [6] Stop inv *[8] Start [9] Latched start [10] Reversing [11] Start reversing [12] Enable start forward [13] Enable start reverse [14] Jog</p>	<p>[16-18] Preset ref bit 0-2 [19] Freeze reference [20] Freeze output [21] Speed up [22] Speed down [23] Setup select bit 0 [28] Catch up [29] Slow down [34] Ramp bit 0 [60] Counter A (up) [61] Counter A (down) [62] Reset counter A [63] Counter B (up) [64] Counter B (down) [65] ResetCounter B</p> <p>5-11 Terminal 19 Digital Input See par. 5-10. * [10] Reversing</p> <p>5-12 Terminal 27 Digital Input See par. 5-10. * [1] Reset</p> <p>5-13 Terminal 29 Digital Input See par. 5-10. * [14] Jog</p> <p>5-15 Terminal 33 Digital Input See par. 5-10. * [16] Preset ref bit 0</p> <p>[26] Precise Stop Inverse [27] Start, Precise Stop [32] Pulse Input</p> <p>5-4* Relays</p> <p>5-40 Function Relay *[0] No operation [1] Control ready [2] Drive ready [3] Drive ready, Remote [4] Enable / No warning [5] Drive running [6] Running / No warning [7] Run in range / No warning [8] Run on ref / No warning [9] Alarm [10] Alarm or warning [12] Out of current range [13] Below current, low [14] Above current, high [21] Thermal warning [22] Ready, No thermal warning [23] Remote ready, No thermal warning [24] Ready, Voltage ok</p>	<p>[25] Reverse [26] Bus ok [28] Brake, NoWarn [29] Brake ready/NoFault [30] BrakeFault (IGBT) [32] Mech.brake control [36] Control word bit 11 [51] Local ref. active [52] Remote ref. active [53] No alarm [54] Start cmd active [55] Running reverse [56] Drive in hand mode [57] Drive in auto mode [60-63] Comparator 0-3 [70-73] Logic rule 0-3 [81] SL digital output B</p> <p>5-5* Pulse Input</p> <p>5-55 Terminal 33 Low Frequency 20 - 4999 Hz * 20 Hz</p> <p>5-56 Terminal 33 High Frequency 21 - 5000 Hz * 5000 Hz</p> <p>5-57 Term. 33 Low Ref./Feedb. Value -4999 - 4999 * 0.000</p> <p>5-58 Term. 33 High Ref./Feedb. Value -4999 - 4999 * 50.000</p> <p>6-* Analog In/Out</p> <p>6-0* Analog I/O Mode</p> <p>6-00 Live Zero Timeout Time 1 - 99 s * 10 s</p> <p>6-01 Live Zero TimeoutFunction *[0] Off [1] Freeze output [2] Stop [3] Jogging [4] Max speed [5] Stop and trip</p> <p>6-1* Analog Input 1</p> <p>6-10 Terminal 53 Low Voltage 0.00 - 9.99 V * 0.07 V</p> <p>6-11 Terminal 53 High Voltage 0.01 - 10.00 V * 10.00 V</p> <p>6-12 Terminal 53 Low Current 0.00 - 19.99 mA * 0.14 mA</p>
--	--	--	--

<p>6-13 Terminal 53 High Current 0.01 - 20.00 mA * 20.00 mA</p> <p>6-14 Term. 53 Low Ref./Feedb. Value -4999 - 4999 * 0.000</p> <p>6-15 Term. 53 High Ref./Feedb. Value -4999 - 4999 * 50.000</p> <p>6-16 Terminal 53 Filter Time Constant 0.01 - 10.00 s * 0.01 s</p> <p>6-19 Terminal 53 mode *[0] Voltage mode [1] Current mode</p> <p>6-22 Terminal 60 Low Current 0.00 - 19.99 mA * 0.14 mA</p> <p>6-23 Terminal 60 High Current 0.01 - 20.00 mA * 20.00 mA</p> <p>6-24 Term. 60 Low Ref./Feedb. Value -4999 - 4999 * 0.000</p> <p>6-25 Term. 60 High Ref./Feedb. Value -4999 - 4999 * 50.000</p> <p>6-26 Terminal 60 Filter Time Constant 0.01 - 10.00 s * 0.01 s</p> <p>6-8* LCP potmeter</p> <p>6-81 LCP potm. Low Reference -4999 - 4999 * 0.000</p> <p>6-82 LCP potm. High Reference -4999 - 4999 * 50.000</p> <p>6-90 Terminal 42 Mode *[0] 0-20 mA [1] 4-20 mA [2] Digital Output</p> <p>6-91 Terminal 42 Analog Output *[0] No operation [10] Output Frequency [11] Reference [12] Feedback [13] Motor Current [16] Power [20] BusControl</p> <p>6-92 Terminal 42 Digital Output See par. 5-40 *[0] No Operation [80] SL Digital Output A</p>	<p>6-93 Terminal 42 Output Min Scale 0.00 - 200.0 % * 0.00 %</p> <p>6-94 Terminal 42 Output Max Scale 0.00 - 200.0 % * 100.0 %</p> <p>7-** Controllers</p> <p>7-2* Process CL Feedback 1 Resource *[0] NoFunction [1] Analog Input 53 [2] Analog input 60 [8] PulseInput33 [11] LocalBusRef</p> <p>7-3* Process PI Ctrl. 7-30 Process PI Normal/ Inverse Ctrl *[0] Normal [1] Inverse</p> <p>7-31 Process PI Anti Windup [0] Disable *[1] Enable</p> <p>7-32 Process PI Start Speed 0.0 - 200.0 Hz * 0.0 Hz</p> <p>7-33 Process PI Proportional Gain 0.00 - 10.00 * 0.01</p> <p>7-34 Process PI Integral Time 0.10 - 9999 s * 9999 s</p> <p>7-38 Process PI Feed Forward Factor 0 - 400 % * 0 %</p> <p>7-39 On Reference Bandwidth 0 - 200 % * 5 %</p> <p>8-** Comm. and Options</p> <p>8-0* General Settings</p> <p>8-01 Control Site *[0] Digital and ControlWord [1] Digital only [2] ControlWord only</p> <p>8-02 Control Word Source [0] None *[1] FC RS485</p> <p>8-03 Control Word Timeout Time 0.1 - 6500 s * 1.0 s</p> <p>8-04 Control Word Timeout Function *[0] Off [1] Freeze Output [2] Stop [3] Jogging</p>	<p>8-9* Bus Jog / Feedback</p> <p>8-94 Bus feedback 1 0x8000 - 0x7FFF * 0</p> <p>13-** Smart Logic</p> <p>13-0* SLC Settings</p> <p>13-00 SL Controller Mode *[0] Off [1] On</p> <p>13-01 Start Event [0] False [1] True</p> <p>[2] Running</p> <p>[3] InRange</p> <p>[4] OnReference</p> <p>[7] OutOfCurrentRange</p> <p>[8] BelowLow</p> <p>[9] AboveHigh</p> <p>[16] ThermalWarning</p> <p>[17] MainOutOfRange</p> <p>[18] Reversing</p> <p>[19] Warning</p> <p>[20] Alarm_Trip</p> <p>[21] Alarm_TripLock</p> <p>[22-25] Comparator 0-3</p> <p>[26-29] LogicRule0-3</p> <p>[33] DigitalInput_18</p> <p>[34] DigitalInput_19</p> <p>[35] DigitalInput_27</p> <p>[36] DigitalInput_29</p> <p>[38] DigitalInput_33</p> <p>*[39] StartCommand</p> <p>[40] DriveStopped</p> <p>13-02 Stop Event See par. 13-01 * [40] DriveStopped</p> <p>13-03 Reset SLC *[0] Do not reset [1] Reset SLC</p> <p>13-1* Comparators</p>	<p>[4] Max. Speed</p> <p>[5] Stop and trip</p> <p>8-06 Reset Control Word Timeout *[0] No Function [1] Do reset</p> <p>8-3* FC Port Settings</p> <p>8-30 Protocol *[0] FC [2] Modbus</p> <p>8-31 Address 1 - 247 * 1</p> <p>8-32 FC Port Baud Rate [0] 2400 Baud [1] 4800 Baud *[2] 9600 Baud</p> <p>8-33 FC Port Parity *[0] Even Parity, 1 Stop Bit [1] Odd Parity, 1 Stop Bit [2] No Parity, 1 Stop Bit [3] No Parity, 2 Stop Bits</p> <p>8-35 Minimum Response Delay 0.001-0.5 * 0.010 s</p> <p>8-36 Max Response Delay 0.100 - 10.00 s * 5.000 s</p> <p>8-5* Digital/Bus</p> <p>8-50 Coasting Select [0] DigitalInput [1] Bus [2] LogicAnd *[3] LogicOr</p> <p>8-51 Quick Stop Select See par. 8-50 * [3] LogicOr</p> <p>8-52 DC Brake Select See par. 8-50 * [3] LogicOr</p> <p>8-53 Start Select See par. 8-50 * [3] LogicOr</p> <p>8-54 Reversing Select See par. 8-50 * [3] LogicOr</p> <p>8-55 Set-up Select See par. 8-50 * [3] LogicOr</p> <p>8-56 Preset Reference Select See par. 8-50 * [3] LogicOr</p>
--	--	--	--

13-10 Comparator Operand *[0] Disabled [1] Reference [2] Feedback [3] MotorSpeed [4] MotorCurrent [6] MotorPower [7] MotorVoltage [8] DCLinkVoltage [12] AnalogInput53 [13] AnalogInput60 [18] PulseInput33 [20] AlarmNumber [30] CounterA [31] CounterB	[1] NoAction [2] SelectSetup1 [3] SelectSetup2 [10-17] SelectPresetRef0-7 [18] SelectRamp1 [19] SelectRamp2 [22] Run [23] RunReverse [24] Stop [25] Ostop [26] DCstop [27] Coast [28] FreezeOutput [29] StartTimer0 [30] StartTimer1 [31] StartTimer2 [32] Set Digital Output A Low [33] Set Digital Output B Low [38] Set Digital Output A High [39] Set Digital Output B High [60] ResetCounterA [61] ResetCounterB	14-22 Operation Mode *[0] Normal Operation [2] Initialisation 14-26 Action At Inverter Fault *[0] Trip [1] Warning 14-4* Energy Optimising 14-41 AEO Minimum Magnetisation 40 - 75 % * 66 % 15-** Drive Information 15-0* Operating Days 15-00 Operating Days 15-01 Running Hours 15-02 kWh Counter 15-03 Power Ups 15-04 Over Temps 15-05 Over Volts 15-06 Reset kWh Counter *[0] Do not reset [1] Reset counter 15-07 Reset Running Hours Counter *[0] Do not reset [1] Reset counter 15-3* Fault Log 15-30 Fault Log: Error Code 15-4* Drive Identification 15-40 FC Type 15-41 Power Section 15-42 Voltage 15-43 Software Version 15-46 Frequency Converter Order. No 15-48 LCP Id No 15-51 Frequency Converter Serial No 16-** Data Readouts 16-0* General Status 16-00 Control Word 0 - 0XFFFF -4999 - 4999 16-01 Reference [Unit] 16-02 Reference % -200.0 - 200.0 % 16-03 Status Word 0 - 0XFFFF 16-05 Main Actual Value [%] -200.0 - 200.0 %	13-11 Comparator Operator [0] Less Than *[1] Approximately equals [2] Greater Than 13-12 Comparator Value -9999 - 9999 * 0.0 13-2* Timers 13-20 SL Controller Timer 0.0 - 3600 s * 0.0 s 13-4* Logic Rules 13-40 Logic Rule Boolean 1 See par. 13-01 * [0] False [30] - [32] SL Time-out 0-2 13-41 Logic Rule Operator 1 *[0] Disabled [1] And [2] Or [3] And not [4] Or not [5] Not and [6] Not or [7] Not and not [8] Not or not 13-42 Logic Rule Boolean 2 See par. 13-40 13-43 Logic Rule Operator 2 See par. 13-41 * [0] Disabled 13-44 Logic Rule Boolean 3 See par. 13-40 13-5* Stazes 13-51 SL Controller Event See par. 13-40 13-52 SL Controller Action *[0] Disabled	16-1* Motor Status 16-10 Power [kW] 16-11 Power [hp] 16-12 Motor Voltage [V] 16-13 Frequency [Hz] 16-14 Motor Current [A] 16-15 Frequency [%] 16-18 Motor Thermal [%] 16-3* Drive Status 16-30 DC Link Voltage 16-36 Inv. Nom. Current 16-37 Inv. Max. Current 16-38 SL Controller State 16-5* Ref. / Feedb. 16-50 External Reference 16-51 Pulse Reference 16-52 Feedback [Unit] 16-6* Inputs / Outputs 16-60 Digital Input 18,19,27,33 0 - 1111 16-61 Digital Input 29 0 - 1 16-62 Analog Input 53 (volt) 16-63 Analog Input 53 (current) 16-64 Analog Input 60 16-65 Analog Output 42 [mA] 16-68 Pulse Input [Hz] 16-71 Relay Output [bin] 16-72 Counter A 16-73 Counter B 16-8* Fieldbus / FC Port 16-86 FC Port REF 1 0x8000 - 0x7FFFF 16-9* Diagnosis Readouts 16-90 Alarm Word 0 - 0XFFFFFFF 16-92 Warning Word 0 - 0XFFFFFFF 16-94 Ext. Status Word 0 - 0XFFFFFFF
---	--	--	---	--

1.1.1.19. Warnings and Alarms

No.	Description	Warning	Alarm	Trip Lock	Error	Cause of Problem
2	Live zero error	X	X			Signal on terminal 53 or 60 is less than 50% of value set in par. 6-10, 6-12 and 6-22.
4	Mains phase loss ¹⁾	X	X	X		Missing phase on supply side, or too high voltage imbalance. Check supply voltage.
7	DC over voltage ¹⁾	X	X			Intermediate circuit voltage exceeds limit.
8	DC under voltage ¹⁾	X	X			Intermediate circuit voltage drops below "voltage warning low" limit.
9	Inverter overloaded	X	X			More than 100% load for too long.
10	Motor ETR over temperature	X	X			Motor is too hot due to more than 100% load for too long.
11	Motor thermistor over temperature	X	X			Thermistor or thermistor connection is disconnected.
12	Torque limit	X	X			Torque exceeds value set in either par. 4-16 or 4-17.
13	Over Current	X	X	X		Inverter peak current limit is exceeded.
14	Earth fault	X	X	X		Discharge from output phases to ground.
16	Short Circuit	X	X	X		Short-circuit in motor or on motor terminals.
17	Control word timeout	X	X			No communication to frequency converter.
25	Brake resistor short-circuited	X	X	X		Brake resistor is short-circuited, thus brake function is disconnected.
27	Brake chopper short-circuited	X	X	X		Brake transistor is short-circuited, thus brake function is disconnected.
28	Brake check	X	X			Brake resistor is not connected/working
29	Power board over temp	X	X	X		Heat-sink cut-out temperature has been reached.
30	Motor phase U missing	X	X	X		Motor phase U is missing. Check the phase.
31	Motor phase V missing	X	X	X		Motor phase V is missing. Check the phase.
32	Motor phase W missing	X	X	X		Motor phase W is missing. Check the phase.
38	Internal fault	X	X	X		Contact local Danfoss supplier.
47	Control Voltage Fault	X	X	X		24 V DC may be overloaded.
51	AMT check U _{nom} and I _{nom}	X	X			Wrong setting for motor voltage, motor current and motor voltage.
52	AMT low I _{nom}	X	X			Motor current is too low. Check settings.
59	Current limit	X	X			VLT overload.
63	Mechanical Brake Low	X	X			Actual motor current has not exceeded "release brake" current within "start delay" time window.
80	Drive Initialised to Default Value		X			All parameter settings are initialized to default settings.
84	The connection between drive and LCP is lost				X	No communication between LCP and frequency converter
85	Button disabled				X	See parameter group 0-4* LCP
86	Copy fail				X	An error occurred while copying from frequency converter to LCP or vice versa.
87	LCP data invalid				X	Occurs when copying from LCP if the LCP contains erroneous data - or if no data was uploaded to the LCP.
88	LCP data not compatible				X	Occurs when copying from LCP if data are moved between frequency converters with major differences in software versions.
89	Parameter read only				X	Occurs when trying to write to a read-only parameter.
90	Parameter database busy				X	LCP and RS485 connection are trying to update parameters simultaneously.
91	Parameter value is not valid in this mode				X	Occurs when trying to write an illegal value to a parameter.
92	Parameter value exceeds the min/max limits				X	Occurs when trying to set a value outside the range.
nw run	Not While RUNNING				X	Parameter can only be changed when the motor is stopped.
Err.	A wrong password was entered				X	Occurs when using a wrong password for changing a password-protected parameter.

¹⁾ These faults may be caused by mains distortions. Installing Danfoss Line Filter may rectify this problem.

Table 1.6: Code list

1

1.1.20. Mains Supply 1 x 200 - 240 VAC

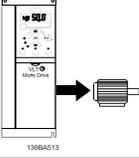

Normal overload 150% for 1 minute						
	Frame M1	Frame M1	Frame M1	Frame M2	Frame M3	
Frequency converter	P0K18	P0K37	P0K75	P1K5	P2K2	
Typical Shaft Output [kW]	0.18	0.37	0.75	1.5	2.2	
Typical Shaft Output [HP]	0.25	0.5	1	2	3	
Output current						
	Continuous (3 x 200-240 V) [A]	1.2	2.2	4.2	6.8	TBD
	Intermittent (3 x 200-240 V) [A]	1.8	3.3	6.3	10.2	TBD
	Max. cable size:					
(mains, motor) [mm ² /AWG]			4/10			
Max. input current						
	Continuous (1 x 200-240 V) [A]	3.3	6.1	11.6	18.7	TBD
	Intermittent (1 x 200-240 V) [A]	4.5	8.3	15.6	26.4	TBD
	Max. pre-fuses [A]	See Section <i>Fuses</i>				
	Environment					
	Estimated power loss at rated load [W], Best case/Typical ¹⁾	12.5/15.5	20.0/25.0	36.5/44.0	61.0/67.0	TBD
Weight enclosure IP20 [kg]	1.1	1.1	1.1	1.6	TBD	
Efficiency Best case/Typical ¹⁾	95.6/94.5	96.5/95.6	96.6/96.0	97.0/96.7	TBD	

Table 1.7: Mains supply 1 x 200 - 240 VAC

1.1.21. Mains Supply 3 x 200 - 240 VAC

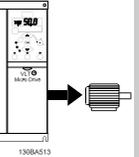

Normal overload 150% for 1 minute							
	Frame M1	Frame M1	Frame M1	Frame M2	Frame M3	Frame M3	
Frequency converter	P0K25	P0K37	P0K75	P1K5	P2K2	P3K7	
Typical Shaft Output [kW]	0.25	0.37	0.75	1.5	2.2	3.7	
Typical Shaft Output [HP]	0.33	0.5	1	2	3	5	
Output current							
	Continuous (3 x 200-240 V) [A]	1.5	2.2	4.2	6.8	TBD	TBD
	Intermittent (3 x 200-240 V) [A]	2.3	3.3	6.3	10.2	TBD	TBD
	Max. cable size:						
(mains, motor) [mm ² /AWG]			4/10				
Max. input current							
	Continuous (3 x 200-240 V) [A]	2.4	3.5	6.7	10.9	TBD	TBD
	Intermittent (3 x 200-240 V) [A]	3.2	4.6	8.3	14.4	TBD	TBD
	Max. pre-fuses [A]	See Section <i>Fuses</i>					
	Environment						
	Estimated power loss at rated load [W], Best case/Typical ¹⁾	14.0/20.0	19.0/24.0	31.5/39.5	51.0/57.0	TBD	TBD
Weight enclosure IP20 [kg]	1.1	1.1	1.1	1.6	TBD	TBD	
Efficiency Best case/Typical ¹⁾	96.4/94.9	96.7/95.8	97.1/96.3	97.4/97.2	TBD	TBD	

Table 1.8: Mains supply 3 x 200 - 240 VAC

1. Power loss at rated load conditions.

1.1.1.22. Mains Supply 3 x 380 - 480 VAC

Normal overload 150% for 1 minute

Frequency converter	P0K37	P0K75	P1K5	P2K2	P3K0	P4K0	P5K5	P7K5
Typical Shaft Output [kW]	0.37	0.75	1.5	2.2	3.0	4.0	5.5	7.5
Typical Shaft Output [HP]	0.5	1	2	3	4	5	7.5	10
IP 20	Frame M1	Frame M1	Frame M2	Frame M2	Frame M3	Frame M3	Frame M3	Frame M3
Continuous (3 x 380-440 V) [A]	1.2	2.2	3.7	5.3	TBD	TBD	TBD	TBD
Intermittent (3 x 380-440 V) [A]	1.8	3.3	5.6	8.0	TBD	TBD	TBD	TBD
Continuous (3 x 440-480 V) [A]	1.1	2.1	3.4	4.8	TBD	TBD	TBD	TBD
Intermittent (3 x 440-480 V) [A]	1.7	3.2	5.1	7.2	TBD	TBD	TBD	TBD
Max. cable size: (mains, motor) [mm ² / AWG]	4/10							
Max. input current								
Continuous (3 x 380-440 V) [A]	1.9	3.5	5.9	8.5	TBD	TBD	TBD	TBD
Intermittent (3 x 380-440 V) [A]	2.6	4.7	8.7	12.6	TBD	TBD	TBD	TBD
Continuous (3 x 440-480 V) [A]	1.7	3.0	5.1	7.3	TBD	TBD	TBD	TBD
Intermittent (3 x 440-480 V) [A]	2.3	4.0	7.5	10.8	TBD	TBD	TBD	TBD
Max. pre-fuses [A]	See Section <i>Fuses</i>							
Environment	See Section <i>Fuses</i>							
Estimated power loss at rated load [W]	18.5/25.5	28.5/43.5	41.5/56.5	57.5/81.5	TBD	TBD	TBD	TBD
Best case/Typical ¹⁾	1.1	1.1	1.6	1.6	TBD	TBD	TBD	TBD
Weight enclosure IP20 [kg]	96.8/95.5	97.4/96.0	98.0/97.2	97.9/97.1	TBD	TBD	TBD	TBD
Efficiency Best case/Typical ¹⁾	1. Power loss at rated load conditions.							


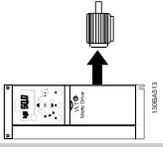


Table 1.9: Mains supply 3 x 380 - 480 VAC

Protection and Features:

- Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips in case of overtemperature
- The frequency converter is protected against short-circuits on motor terminals U, V, W.
- If a motor phase is missing, the frequency trips and issues an alarm.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter is protected against earth faults on motor terminals U, V, W.

Mains supply (L1/L, L2, L3/N):

Supply voltage	200-240 V \pm 10%
Supply voltage	380-480 V \pm 10%
Supply frequency	50/60 Hz
Max. imbalance temporary between mains phases	3.0 % of rated supply voltage
True Power Factor (λ)	\geq 0.4 nominal at rated load
Displacement Power Factor ($\cos\phi$) near unity	(> 0.98)
Switching on input supply L1/L, L2, L3/N (power-ups)	maximum 2 times/min.
Environment according to EN60664-1	overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100.000 RMS symmetrical Amperes, 240/480 V maximum.

Motor output (U, V, W):

Output voltage	0 - 100% of supply voltage
Output frequency	0-200 Hz (VVC+), 0-400 Hz (u/f)
Switching on output	Unlimited
Ramp times	0.05 - 3600 sec.

Cable lengths and cross sections:

Max. motor cable length, screened/armoured (EMC correct installation)	15 m
Max. motor cable length, unscreened/unarmoured	50 m
Max. cross section to motor, mains, load sharing and brake *	
Maximum cross section to control terminals, rigid wire	1.5 mm ² /16 AWG (2 x 0.75 mm ²)
Maximum cross section to control terminals, flexible cable	1 mm ² /18 AWG
Maximum cross section to control terminals, cable with enclosed core	0.5 mm ² /20 AWG
Minimum cross section to control terminals	0.25 mm ²

** See tables for mains supply for more information!*

Digital inputs (Pulse/encoder inputs):

Programmable digital inputs (Pulse/encoder)	5 (1)
Terminal number	18, 19, 27, 29, 33,
Logic	PNP or NPN
Voltage level	0 - 24 V DC
Voltage level, logic '0' PNP	< 5 V DC
Voltage level, logic '1' PNP	> 10 V DC
Voltage level, logic '0' NPN	> 19 V DC
Voltage level, logic '1' NPN	< 14 V DC
Maximum voltage on input	28 V DC
Input resistance, R _i	approx. 4 k Ω
Max. pulse frequency at terminal 33	5000 Hz
Min. pulse frequency at terminal 33	20 Hz

Analog inputs:	
Number of analog inputs	2
Terminal number	53, 60
Voltage level	0 -10 V
Input resistance, R_i	approx. 10 k Ω
Max. voltage	20 V
Current level	0/4 to 20 mA (scalable)
Input resistance, R_i	approx. 200 Ω
Max. current	30 mA
Analog output:	
Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4 - 20 mA
Max. load to common at analog output	500 Ω
Accuracy on analog output	Max. error: 0.8 % of full scale
Resolution on analog output	8 bit
Control card, RS-485 serial communication:	
Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-)
Terminal number 61	Common for terminals 68 and 69
Control card, 24 V DC output:	
Terminal number	12
Max. load	200 mA
Relay output:	
Programmable relay output	1
Relay 01 Terminal number	01-03 (break), 01-02(make)
Max. terminal load (AC-1) ¹⁾ on 01-02 (NO) (Resistive load)	250 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 01-02 (NO) (Inductive load @ $\cos\phi$ 0.4)	250 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 01-02 (NO) (Resistive load)	30 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 01-02 (NO) (Inductive load)	24 V DC, 0.1A
Max. terminal load (AC-1) ¹⁾ on 01-03 (NC) (Resistive load)	250 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 01-03 (NC) (Inductive load @ $\cos\phi$ 0.4)	250 V AC, 0.2A
Max. terminal load (DC-1) ¹⁾ on 01-03 (NC) (Resistive load)	30 V DC, 2 A
Min. terminal load on 01-03 (NC), 01-02 (NO)	24 V DC 10 mA, 24 V AC 20 mA
Environment according to EN 60664-1	overvoltage category III/pollution degree 2
<i>1) IEC 60947 part 4 and 5</i>	
Control card, 10 V DC output:	
Terminal number	50
Output voltage	10.5 V \pm 0.5 V
Max. load	25 mA
<i>All inputs, outputs, circuits, DC supplies and relay contacts are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.</i>	
Surroundings:	
Enclosure	IP 20
Enclosure kit available	IP 21
Enclosure kit available	TYPE 1
Vibration test	1.0 g
Max. relative humidity	5% - 95%(IEC 60721-3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 60721-3-3), coated	class 3C3
Test method according to IEC 60068-2-43 H2S (10 days)	
Ambient temperature	Max. 40 °C
<i>Derating for high ambient temperature, see section on special conditions</i>	
Minimum ambient temperature during full-scale operation	0 °C
Minimum ambient temperature at reduced performance	- 10 °C

Temperature during storage/transport	-25 - +65/70 °C
Maximum altitude above sea level without derating	1000 m
Maximum altitude above sea level with derating	3000 m

Derating for high altitude, see section on special conditions

EMC standards, Emission	EN 61800-3, EN 61000-6-3/4, EN 55011, IEC 61800-3 EN 61800-3, EN 61000-6-1/2, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6
EMC standards, Immunity	EN 61000-4-4, EN 61000-4-5, EN 61000-4-6

See section on special conditions

1.1.23. Derating for Ambient Temperature

The ambient temperature measured over 24 hours should be at least 5 °C lower than the max. ambient temperature.

If the frequency converter is operated at high ambient temperature, the continuous output current should be decreased.

The VLT Micro Drive FC 51 has been designed for operation at max 50 °C ambient temperature with one motor size smaller than nominal. Continuous operation at full load at 50 °C ambient temperature will reduce the lifetime of the frequency converter.

1.1.24. Derating for Low Air Pressure

The cooling capability of air is decreased at low air pressure.

For altitudes above 2000 m, please contact Danfoss Drives regarding PELV.

Below 1000 m altitude no de-rating is necessary but above 1000 m the ambient temperature or the maximum output current should be decreased. Decrease the output by 1% per 100 m altitude above 1000 m or reduce the max. ambient temperature by 1 degree per 200 m

1.1.25. Derating for Running at Low Speeds

When a motor is connected to at frequency converter, it is necessary to check that the cooling of the motor is adequate.

A problem may occur at low speeds in constant torque applications. Running continuously at low speeds – below half the nominal motor speed – may require additional air cooling. Alternatively, choose a larger motor (one size up).

1.1.26. Options for VLT Micro Drive FC 51

Ordering No	Description
132B0100	VLT Control Panel LCP 11 w/o potentiometer
132B0101	VLT Control Panel LCP 12 with potentiometer
132B0102	Remote Mounting Kit for LCP incl. 3 m cable IP55 with LCP 11, IP21 with LCP 12
132B0103	Nema Type 1 kit for M1 frame
132B0104	Nema Type 1 kit for M2 frame
132B0105	Nema Type 1 kit for M3 frame
132B0106	De-coupling plate kit for M1 and M2 frames
132B0107	De-coupling plate kit for M3 frame
132B0108	IP21 for M1 frame
132B0109	IP21 for M2 frame
132B0110	IP21 for M3 frame
132B0111	DIN rail mounting kit for M1

Danfoss Line Filters and brake resistors are available upon request.



www.danfoss.com/drives

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

